

**IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY**


**9 ft / 2.74 m Pre-Lit Christmas Tree ITM. / ART. 634276 with Easy Shape Technology™ allows tree branches to spring into shape. Just assemble and decorate!**

With proper use and care, your tree will provide years of use and memories. Carefully follow the instructions below on how to assemble and disassemble your tree.


If you should have any problems with your tree, or if the tree does not light after assembly, please refer to the trouble shooting section of this manual or call our toll free number: 1-866-489-0019 and a customer service representative will assist you.

Our customer service center is open Monday through Friday 8:00 AM to 8:00 PM EST with additional hours throughout the holiday season: Saturday and Sunday 8:00 AM to 8:00 PM EST

You can also visit us on the web at [www.geholidaylighting.com](http://www.geholidaylighting.com)  
Enjoy your holidays!

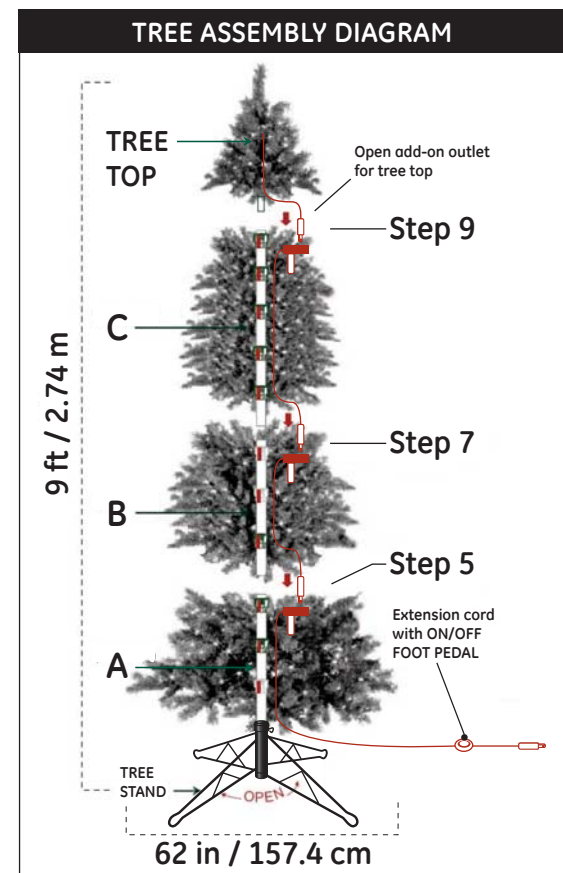

**1** Remove and unwrap all parts.

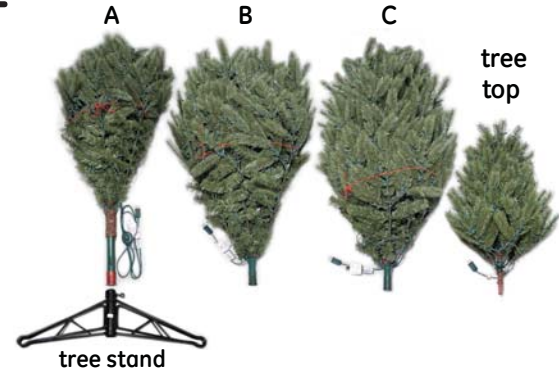

For proper installation and use, the tree must be set up in a clear area without any obstructions and on a flat surface.

**NOTE:** Before opening stand, be certain the thumbscrew is loosened, so it does not interfere with opening legs.

Place stand in desired location before assembling. Your assembled tree will be heavy and difficult to move.

Open tree stand.



**2** Insert section A into tree stand.



**3** Untie RED twist-tie to release branch panels. All branches should fall in place with a gentle pull on the outer layer of branches.



**4** Assemble section B to section A.

Align the grooved notch at the bottom of section B with the arrow ↓ marked on the top of section A. Firmly seat the 2 sections together.



**5** Insert plug from extension cord of section B into the unused extension cord outlet of section A.



**6** Untie RED twist-tie to release branch panels. All branches should fall in place with a gentle pull on the outer layer of branches.



**7** Repeat step 4 through 6 to install section C.



**8** Hold Tree Top with one hand as shown. Gently pull down the outer layer of branches, and fully insert tree top into the top of the pole on section C.



**9** Insert plug from tree top into the unused extension cord outlet of section C.




**10** Insert main plug attached to the foot pedal switch directly into an electrical wall outlet. Press the switch to turn lights on.



If needed, adjust branch tips to make the tree look fuller.

**Congratulations!** Your tree is complete and ready to decorate.

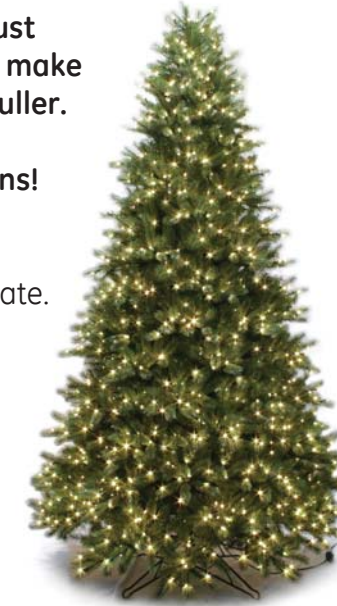

**Trouble Shooting Tips**

If tree does not illuminate, try stepping on the On/Off FOOT PEDAL. If the tree is plugged into a switch controlled wall outlet, make sure the switch is turned ON. If one section of your tree does not illuminate, check that section for loose or missing bulbs, all factory connections are properly made or that you properly made all electrical connections between each tree section. Also, check the fuse plug for a missing or burned out fuses.

**Most Frequently Asked Questions**

- Q: Can I add a lighted, decorative tree topper to my tree?  
A: Yes, there is an add-on outlet on the back of the tree top plug.
- Q: Can I put blinking or flashing bulbs on my tree?  
A: No
- Q: Can I add extra string sets to my pre-lit tree?  
A: No
- Q: Can I put my pre-lit tree outside?  
A: No. Pre-lit trees are for decorative indoor use only.
- Q: Can I hang glass ornaments on a pre-lit tree?  
A: Yes, however, do not hang directly on the wires of the lights.
- Q: Can I remove a light string bulb and add a pig tailed illuminated or animated ornament or motor?  
A: No, removing the bulbs and inserting any additional device into a lamp holder will cause the light set to cease to operate.

**Tree Storage**

Unplug the power supply from the wall outlet. Starting from tree top. Unplug the plug from tree top to section B. Lift tree top straight up to remove from section B. Step A: Gently fold the branches up toward the center and place in shipping carton. Unplug the plug from section C to section B. Lift section C straight up to remove from section B. Repeat Step A. Unplug the plug from section B to section A. Lift section B straight up to remove from section A. Repeat Step A. While holding the tree pole of section A, loosen the thumbscrew located on the tree stand. Pull section A up and out of the tree stand. Repeat Step A. To close the tree stand for storage, loosen thumbscrew and push the brackets inward. When your tree is not in use, be sure to store it neatly in a cool, dry location.

**This is not a toy. For decorative use only. DO NOT USE OR INSTALL ANY ADDITIONAL LIGHTING OR ORNAMENTATION THAT IS POWERED BY A LIGHT BULB SOCKET. DOING THIS MAY RESULT IN DAMAGE TO YOUR CHRISTMAS TREE OR CAUSE PERSONAL INJURY.**

Imported by:  
Costco Wholesale Corporation  
P.O. Box 34535  
Seattle, Washington 98124-1535  
U.S.A.  
1-800-774-2678 • [www.costco.com](http://www.costco.com)  
For customer service call: 1-866-489-0019 or visit us on the web at [www.geholidaylighting.com](http://www.geholidaylighting.com)

For indoor use only • 120 Volts 60 Hz  
Printed in China • MADE IN CHINA  
HG12-02W/CO 9ft